
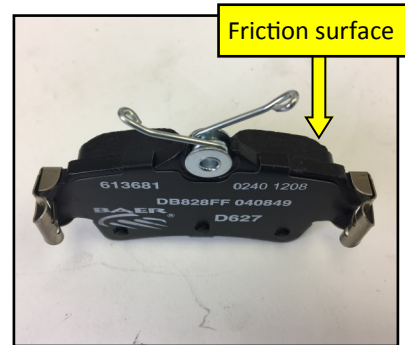
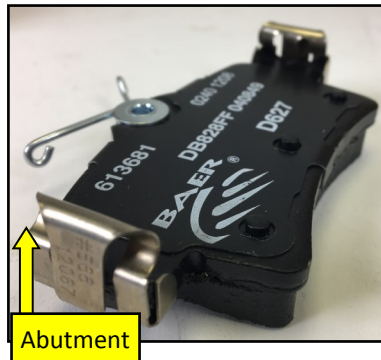




### Installing Pads - IronSport Caliper

Each caliper takes (1) pad retention spring and (4) pad abutments. The pad retention spring gets installed onto the caliper body, while the pad abutments get installed on the 'ears' of the pads.

1. Install each pad abutment onto the 'ears' of the caliper. The abutment should face away from the friction surface. There is a small tab that locks into place once installed correctly.

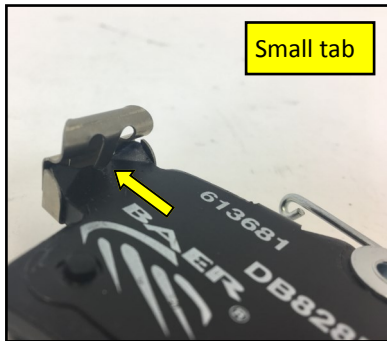

2. Install the pads into the anchor. Put the pad into rotor pathway of the anchor and gently slide the pad and abutments into the inboard side of the anchor. You will be compressing the spring on the side of the abutment as you slide the pad into place. This is a tight fit. Once complete you can do the same for the outboard pad.

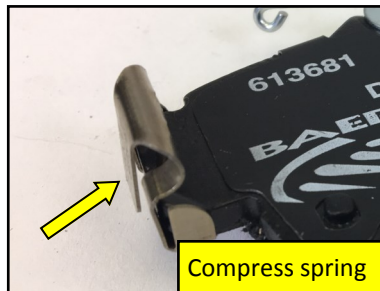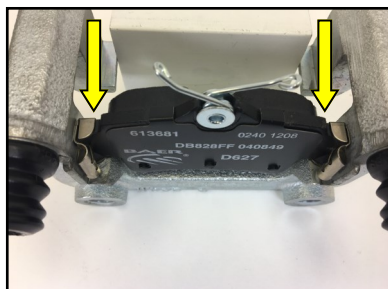

3. Install the pad retention spring into the body of the caliper. From the inside of the caliper body, insert the long tab into the opening and slide it down until the small bent tab clears the piston. Now push the bent tab into the slot and slide it back until it locks onto the ridge on the body as shown.

